

## About WIRES-X operation after DG-ID function update FT-991/FT-991A

### About DG-ID setting and access method

---

For access to the WIRES-X node station after this update, please use the DG-ID function to connect to the node station.



---

With this update, the DSQ (digital squelch) function can not be used. After updating, use the DG-ID function to access the node station.

Please make sure that the wires-X node station DSQ is set up to 00 to 99. New DG-ID format only accepts 00 to 99.

---

### How to access the WIRES-X node station

1. Press the **MENU(SETUP)** button to engage the Menu mode.
2. Rotate the **MULTI** knob to select "153 WIRES DG-ID".
3. Touch [SELECT] on the LCD.
4. Rotate the **MULTI** knob to select the DG-ID number from 01 to 99.  
AUTO: May connect to the node station available in your area.  
01 to 99: May connect to the node station whose DG-ID matches.



- The default setting is "AUTO".
- 

5. Touch [ENTER] on the LCD to save the setting.
6. Touch [BACK] on the LCD to return to normal operation.
7. Set to the frequency of the desired local node.
8. Touch [X].  
When a local node is found, "X" will be lit solid.